


Syphons Type PSY

Installation.


When installing a syphon it is good practice to add 200ml of water or product to the syphon after fitting to the process and before fitting the instrument. This will give protection immediately. Heat from the process will transform this to condensate for correct operation.

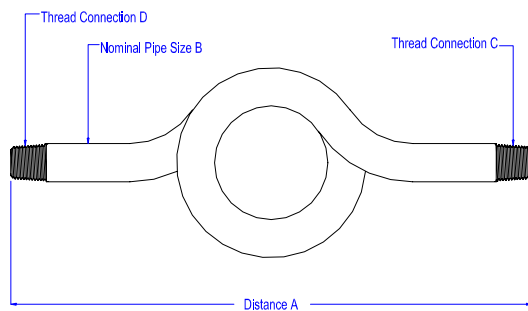

Standard Pigtail Syphon configuration.

Size	"A"	"B"	"C"	"D"
3/8"	280	3/8"	3/8" BSPT	3/8" BSPT
1/2"	315	1/2"	1/2" BSPT	1/2" BSPT

*All Dimensions are in millimetres.

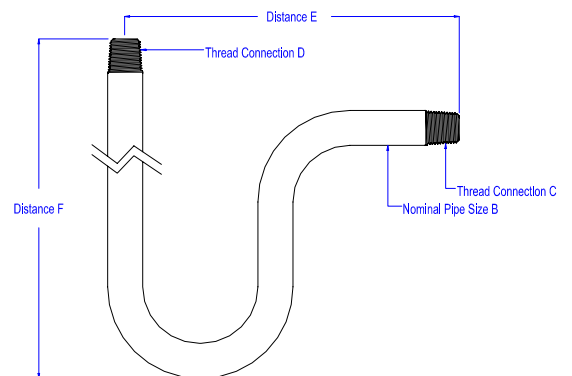

Standard Vertical Syphon configuration.

Size	"B"	"C"	"D"	"E"	"F"
1/2"	1/2"	1/2" BSPT	1/2" BSPT	200	385

*All Dimensions are in millimetres.